

3800 N. MILL ROAD VINELAND, NJ 08360 PHONE: 800-843-1794 FAX: 800-922-4361

CG-1968-T-55

DRAIN VALVE ASSEMBLY INSTRUCTIONS

CG-1968-T-55 3" DRAIN VALVE, ZERO DEAD SPACE, IMPROVED, PILOT PLANT, STABILIZING PIN

Our detachable zero dead space drain valve has two Perfluoro o-rings installed on the shaft and one Perfluoro o-ring installed on the tip. A FEP encapsulated silicone o-ring is also supplied for attachment to the tip in low temperature applications. The drain valve is connected to the reactor by a unique 3" beaded pipe valve seat and has a 1-1/2" beaded pipe side arm.

PLEASE NOTICE TEMPERATURE LIMITATIONS ON O-RINGS AND RECOMMENDED TORQUE SETTING FOR BEADED PIPE COUPLINGS LISTED BELOW BEFORE USING THIS VALVE.

O-Ring Material	<u>Color</u>	<u>Temperature Range (°C)</u>	Beaded Pipe Coupling	Recommended Torque Setting
Perfluoro	Black	-7 to 230	1-1/2"	50 in-lbs
FEP-Silicone	Orange	-62 to 205	3"	75 in-Ibs

Attaching the valve to the reactor:

- A. Wet coupling and the beaded pipe ends, on the reactor and valve, with water
- B. Snap the coupling over the valve seat on the reactor
- C. Snap the valve assembly into other side of the coupling. Plug must be in the open position
- D. Tighten the coupling with a torque wrench to the recommended torque setting

PLEASE NOTE: PLUG MUST BE IN THE OPEN POSITION TO INSTALL OR REMOVE

