

3800 NORTH MILL ROAD VINELAND, NJ 08360 PHONE: 800.843.1794

FAX: 800.922.4361

CG-4509-A Rapid Purge Valve Instruction Sheet

<u>Operation of Rapid Purge Valve:</u> Connect the reaction apparatus, vacuum source and gas source to the hose connections on the rapid purge valve.

<u>Diagram A:</u> Air is removed from the reaction apparatus while the check valve is closed.

<u>Diagram B:</u> The apparatus is filled with the desired gas after the vessel is evacuated. Any over-pressure escapes through the float valve.

After purging is complete the system is kept under a slight positive pressure.



