




CLS-1399-G100: CABLE TIE GUN

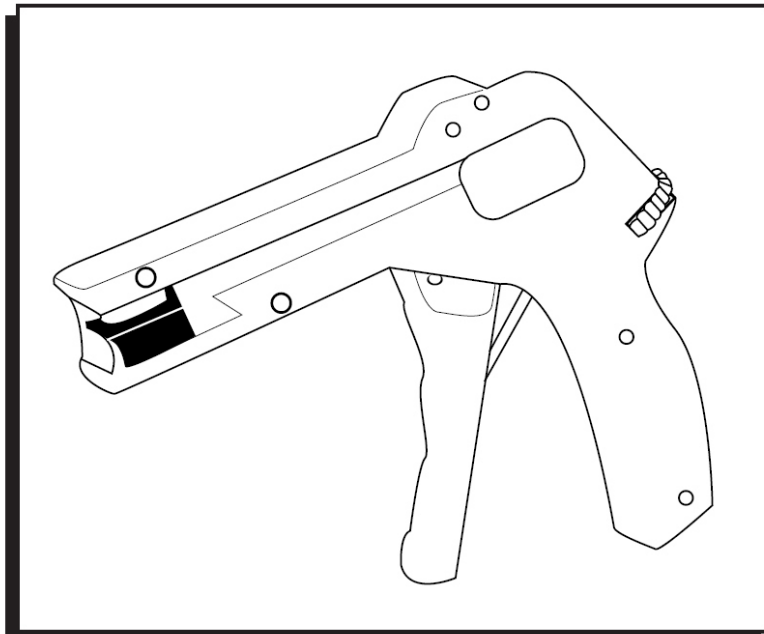

OPERATING INSTRUCTIONS


BASIC OPERATIONS

1. Place tie around bundle and pull tight with hand.
2. Attach tool at tie head and squeeze trigger to increase tension.

ADJUSTING GUN

1. Adjust the tension by turning the red tension knob located on the handle of the gun.
 - Turn to the right to increase pressure
 - Turn to the left to decrease pressure

2. Set the tension knob in the proper position according to the width of the cable tie which will be cut down. (See Figure 1)

 **NOTE:** If tie is too loose, increase tension. If tie tears or breaks, reduce the tension level.

3. Tie is pulled until it reaches the pre-set tension and then it is cut off.


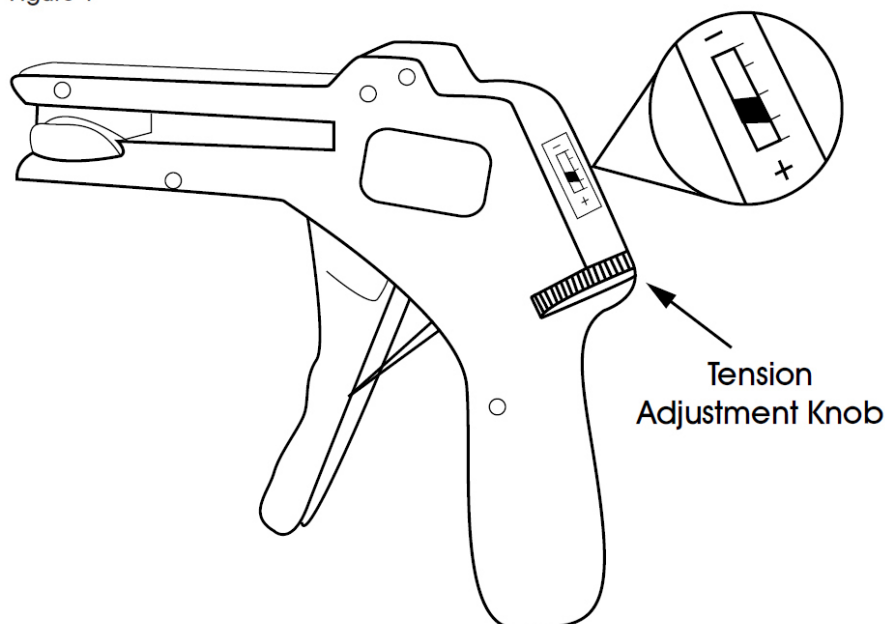



 **CAUTION!** This tool has been designed for use with mil-spec approved cable ties only. Do not use this device for tensioning or cutting any other wires or materials.

Figure 1



- Suitable for 2.5 mm  -
+
- Suitable for 3.6 mm  -
+
- Suitable for 4.8 mm  -
+